 


DALI to 0-10V Module make the 0-10V driver DALI controllable the 2 parallel 0-10V signal outputs



Setting DALI address

- Manual: Long press any one of the buttons---address display will flicker---short press button to set address we want---long press any button to confirm.
- DALI master setting: It can be set address by all DALI masters which have this function. The specific operation can refer to DALI master manual.
- Once an address is selected, all four channels address will be same. the 2 parallel outputs 0-10V will share the same address, each this device occupy only 1 DALI address.