# **D** Lunatone

### **DALI-2 CS Corridor**

# Datasheet Combi Sensor Module



DALI-2 sensor module for presence detection, light intensity measurement and constant light control

Application Controller: Art.Nr. 88793325 Art.Nr. 88793325-IP65

Instancemode: Art.Nr. 88793325-INT Art.Nr. 88793325-INT-IP65

### DALI-2 CS Corridor Multifunctional Sensor Module

### Overview

- Sensor Module for DALI and DALI-2 lighting systems
- Movement detection (PIR) instance type 3 (62386-303) and light intensity measurement instance type 4 (62386-304)
- 4 operating modes:
  - Movement triggered
  - Movement triggered with constant light control
  - Constant light control
  - Light control (4 thresholds)
- Operating modes can be changed via scenes and external DALI commands
- Corridor function second light level before off in case of absence
- Light threshold-controlled regulation for the control of blinds or roller blinds
- The module can be used as a DALI light controller or just as sensor unit

- for integration in building management systems
- Easy configuration via DALI-Cockpit Software Tool and Lunatone DALI USB interface.
- Multiple sensor modules can be installed within a DALI system.
- Automatic synchronisation of multiple DALI-2 CS modules with the same effective range
- Supply via the DALI bus, no additional power supply needed
- Suitable for installation in luminaries
- Version for indoor and outdoor use IP65





### Specification, Characteristics

Туре	DALI-2 CS Corridor	DALI-2 CS Corridor IP65
Article number	88793325	88793325-IP65
Electrical Data:		
Power supply	via DALI line ((DALI voltage according to IEC62386)	
Typ. Current consumption on DALI line	3.5 mA	
Input / Output	DALI	
Motion Detection (62386 -303) principle	PI	3
principle	PIR	
detection range (at >8°C temperature difference)	5m	
zones	88+16	
horizontal	±75°	
vertical	+10°/-25°	
min. temperature difference	>4°C	




details	See Figure 1, page 5		
Light sensor (62386-304)	range: 0-2047lux (11bit), resolution: 1lux DALI-2 event:0-2047lux(10bit), resolution: 2lux		
Function	configurable		
General data			
storing and transportation temperature	-20°C +70°C		
operational ambient temperature	-20°C +60°C		
Protection degree	IP20	IP65	
suitable ambient	indoor	outdoor	
mounting	surface / luminary built in		
Connection cable length	350mm		
housing size	44 x16x22mm – details see drawing		


### **Factory Setting**

For simple applications the factory settings are sufficient:

	<b>DALI-2 CS Corridor</b> Art. Nr.: 88793325 Art. Nr.: 88793325-IP65	DALI-2 CS Corridor Integration Art. Nr.: 88793325-INT Art. Nr.: 88793325-INT-IP65
DALI-2 Settings	Application Controller – Master Mode	Instance Mode – Slave Mode
Operating Mode	Motion detection without constant light control, an external <i>ON command</i> deactivates motion detection until the next external <i>OFF command</i>	NA
Effective range	Broadcast	NA
ON command (1)	Recall Max	NA
Hold Time (2)	10min	NA
Absence value (3)	none	NA
Hold Time Absence (4)	Os	NA
OFF command (5)	Off	NA
OnCMD threshold	none	NA
Bright Out threshold	none	NA
Power Up behaviour	No action	NA
Constant light control (CLC)	inactive	NA
Front-LED (motion indication)	active	active
Instance 0 - motion event messages	inactive	active
Instance 1 – light intensity event messages	inactive	active

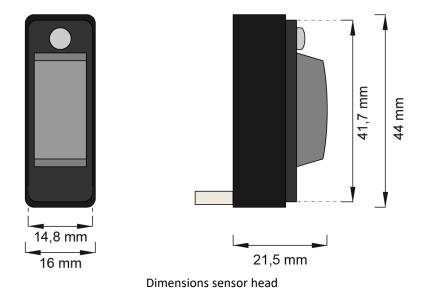


### **Application Example**

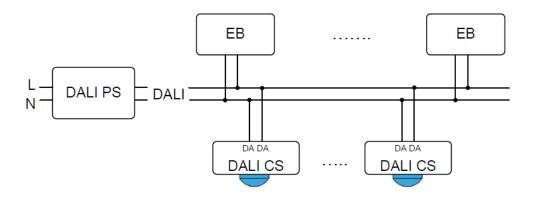

Typical application: multiple sensors in one DALI line



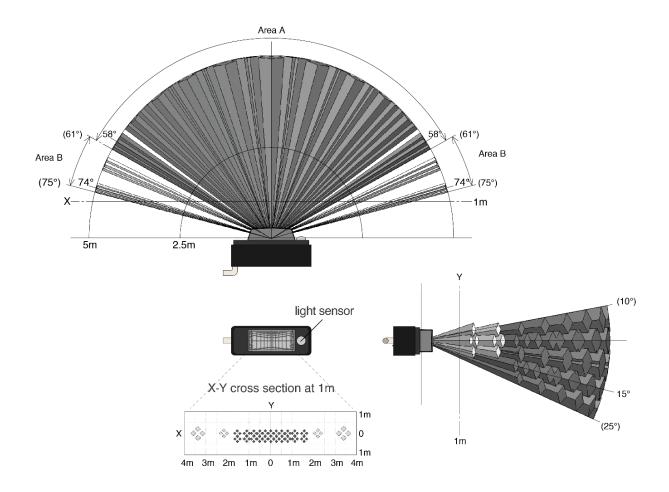

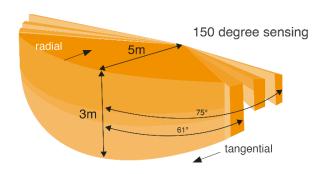


Figure 1 Detection area: X-Y cross section at 1m

■ Lunatone 6

### Installation

- the DALI-2 CS Corridor module is directly connected and supplied by the DALI bus. A DALI bus power supply is required.
- The connection to the DALI terminals can be made regardless of polarity.
- The wiring should be carried out as a permanent installation in a dry and clean environment.
- Installation may only be carried out in a voltage-free state of the system and by qualified specialists.
- National regulations for setting up electrical systems must be followed.
- The DALI wiring can be realized with standard low-voltage installation material. No special cables are required.



Attention: The DALI-signal is not classified as SELV circuit (Safety Extra Low Voltage). Therefore, the installation regulations for low voltage apply.



 
Note: The voltage drop on the DALI line at maximum length (300m) and maximum bus load (250mA) must not exceed 2V.

### **Presence Detection**

For movement detection a temperature difference between the moving object and environment of at least 4°C is required. Heat sources such as copiers or heaters may have a negative influence on motion detection.

#### **Detection Area**

The DALI-2 CS Corridor has a "hammerhead lens" with a detection range of up to 5m and an asymmetrical alignment. The horizontal detection angle is up to 150°, while the vertical is asymmetrical (+ 10 °, -25 °). The lens is particularly recommended for wall mounting e.g. in corridors.



### **Cycle of Motion Detection**

The motion detection is always processed according to the following sequence (Figure 2):

 


Figure. 1 motion/presence detection sequence

#### States:

- 1: Fade In Time dim to 1st light level
- 2: Hold Time (On-State)
- 3: Fade Time dim to 2<sup>nd</sup> light level
- 4: 2<sup>nd</sup> Hold Time (2<sup>nd</sup> Light Level)
- 5: Fade Out Time dim to off
- P: Presence detected retrigger
- 7: Off



If motion is detected the sensor switches to the configured light level. While presence is detected (P) or the hold time is running (2) the light level stays on – either on a fix light level or controlled by a constant light control algorithm.

After the hold time, if not further motion was detected, the sensor changes the light level to the 2<sup>nd</sup> light level for a defined time (4). This 2<sup>nd</sup> light level is a user defined value (no constant light control). If motion is detected in this state, the sensor switches to the previous states (1, P). In case no further motion is detected the Off command (7) is sent

HINT: set the "absence level" to a low value, otherwise it could be higher than the light level set by the constant light control.

Steps Nr 1, 3 and 5 control the change between the states: 7/P/2/4/7. Depending on the DALI-commands for each state, the fade time can be used to allow smooth changes.

### **Light Sensor**

### Light measurement

The DALI-2 CS Corridor also includes a light sensor. The light sensor measures the reflected illuminance in a range from 0 to 2047 lux. The resolution is 2 lux.

The incident light is rated by the spectral sensitivity of the human eye and thus comparable to the subjective visual perception of brightness.

The incident light is accumulated over the area covered by the lens and can be interpreted as average value in the detection area. A reference to the reflecting surface below the sensor can be established with the help of a reference measurement and adjustable offset value.

### Functionality

It is necessary to distinguish between application controller and DALI-2 instances.

The application controller gives direct DALI control commands that are immediately executed by the DALI drivers.

**DALI-2 instances** generate event messages that are interpreted and processed by higherlevel control units with DALI connection (e.g. DALI-2 CS in Master Mode, WAGO, Beckhoff, LUNATONE DALI-2 KNX gateway). (General information on the DALI-2 instance mode: https://www.lunatone.com/en/dali-2factsheet/ section: DALI-2 Instancemode )

### Additional Information: A

<u>deactivated</u> Application Controller is indicated in the DALI Cockpit device tree with: 4.

A device with active instances is indicated with: 0

The DALI-2 CS Corridor (Art. Nr.: 88793325 and with art. nr. extensions: -IP65) can be used as either an application controller: Master Mode, or in instance mode: Slave Mode. For the application controller all operating modes and setting options described in the document are available.

The **DALI-2 CS Corridor Integration** (Art. Nr.: 88793325-INT and with art. nr. extensions: -IP65): does not have an application controller and is always in instance mode. The configuration options are described in section Instances, on page 19.



### **Operating Modes**

DALI-2 CS Corridor (Art.Nr.: 88793325, and Art.Nr.: 88793325-IP65)

The DALI-2 CS Corridor offers 4 different operating modes: motion control, motion control with constant light control, sole constant light control or light control via light thresholds.

External commands can also be used to influence the operating behaviour of the sensor (e.g. when operated via another control device). The reaction to such interventions is explained in detail for each operating mode.

### Operating Mode 1 – motion control

Movement activates a fixed light level

If movement is detected the time sequence is activated with a user defined fixed light level in State 2 (see Figure. 1 "Motion detection: sequence" on page 6). The light level stays active until no more movement is detected and the hold time has elapsed. Then the light level will be switched to the 2<sup>nd</sup> user defined light level.

Additional threshold values can be defined, such that the motion control is only active above or below this defined threshold.

The operating behaviour can be influenced by external on / off / dimming and scene commands. The options for each command are described on page 15

## Operating Mode 2 – motion control with constant light control

- Movement activates constant light control
- 2<sup>nd</sup> light level is user defined and constant

If movement is detected the time sequence is activated with constant light control in State 2

(see figure "Motion detection: sequence" on page 6). The constant light control stays active until no more movement is detected and the "Hold On Time" has expired. Then the light level will be switched to the 2<sup>nd</sup> light value, which is a fixed user defined value.

Additional threshold values can be defined: such that the motion and light control is only active above or below this defined threshold.

The operating behaviour can be influenced by external on / off / dimming and scene commands. The options for each command are described on page 15

### Operating Mode 3 – constant light control

- Constant light Control
- No motion detection

In this operating mode, only the light sensor is used; motion detection is inactive. The constant light control can be switched on and off with DALI commands (e.g. from a control device such as a DALI light switch).

The operating behaviour can be influenced by external on / off / dimming and scene commands. The options for each command are described on page 18.

### Operating Mode 4 – light threshold control

- Light control via light thresholds
- No motion detection

Only the light sensor is used in this operating mode. Both motion detection and constant light control are inactive. 4 light thresholds can be defined which trigger a DALI command on either falling below or exceeding the threshold. 2 of the 4 thresholds can be used to send commands repeatedly. The commands are sent at a user-defined interval until the threshold condition is no longer met.



The operating behaviour can be influenced by external scene commands. The options are described on page 19.

### Additional Functionality

### **Response to external DALI commands**

The behaviour of the control in the event of external commands (e.g. by a switch) can be configured with the DALI cockpit. Depending on the operating mode, different behaviours are possible. The options are described later in the document.

The following commands sent to the same destination address (1<sup>st</sup> address) are interpreted as an **ON command**:

RECALL MAX
RECALL MIN
ON AND STEP UP
Light level (DAP)>0%
GOTO SCENE X (if the command was
configured to be interpreted as an ON
command for the CS)

The following commands sent to the same destination address are interpreted as an **OFF** command:

OFF
Light level (DAP) =0
GOTO SCENE X (if configured to be interpreted as an OFF command for the CS)

**Dimming commands**: In addition, it can be specified how the motion control or light control should behave when manual dimming commands (UP/DOWN) to the target address (1. Destination address) occurs.

### On- and Bright Out threshold

The motion sensor function can be adapted to the ambient light behaviour with the help of the On- and Off-Threshold.

ON Command threshold: The motion detection sequence can be started independent from the actual light level (default) or if the light level is above or below the OnCmd-threshold.

For a running motion sequence the presence detection – retriggering the sequence on motion - can either be set independent from the actual light level or only if the light level is below the **Bright out threshold**.

Bright out- Application example: Car Park lighting, that is set ON during the night (if measured light level < 70lux) but should not be kept ON during the day even though there might be constant detection of motion.

#### Power-On behaviour

It is possible to configure a start-up command to achieve a defined operating state after power on (return of the bus voltage). The start-up command can either be a DALIcommand or a fast run of the motion detection sequence.

### Multiple sensors in same group

It is possible that several sensors have the same effective range, e.g. if several sensors are used to cover a large detection area. In the DALI Cockpit software (tab: "Synchronisation") the sensor addresses used for motion detection and sensor addresses used for light detection can be specified. Backward compatibility for older generation CS is made possible by the option "Backward compatibility with eDALI CS". Definition of the same effective range (target address 1) automatically synchronizes older generation sensors. The parameters of the sensors should be coordinated, especially the hold on times.



### Configuration in DALI-Cockpit

DALI-2 CS Corridor (Art.Nr.: 88793325 and Art.Nr.: 88793325 -IP65)

The addressing and configuration of the DALI CS Corridor can be done easily with the help of the DALI Cockpit software tool and a suitable interface module (DALI USB, DALI 4Net, DALI SCI RS232). After an address has been assigned the parameters can be configured to fit the application.

The spatial allocation of each sensor can be done by visual localisation. Selection of the "localize" check box in the DALI cockpit will lead to flashing of the red LED of the currently selected sensor.



Configuration of the sensor is possible with the settings of the different tabs, explained in detailed on the following pages.

## Tab: "General" – Sensor mode, Operating Mode:

Selection of the fundamental configuration is made on the "General" tab, see Figure. 2. The sensor can be set to Master or Slave Mode.

In *Master-Mode*, the DALI-2 CS takes over control according to the subsequently selected operating mode. The DALI-2 CS *Master* is an **application controller** and gives direct DALI control commands that are immediately executed by the DALI gears.

In *Slave-Mode*, the DALI-2 CS is in **instance mode** and does not send any control commands. Instead, the DALI-2 instances generate event messages that are interpreted and processed by a DALI-2 CS in *Master* mode or by higher-level DALI control unit (e.g. WAGO, Beckhoff, LUNATONE DALI-2 KNX gateway).

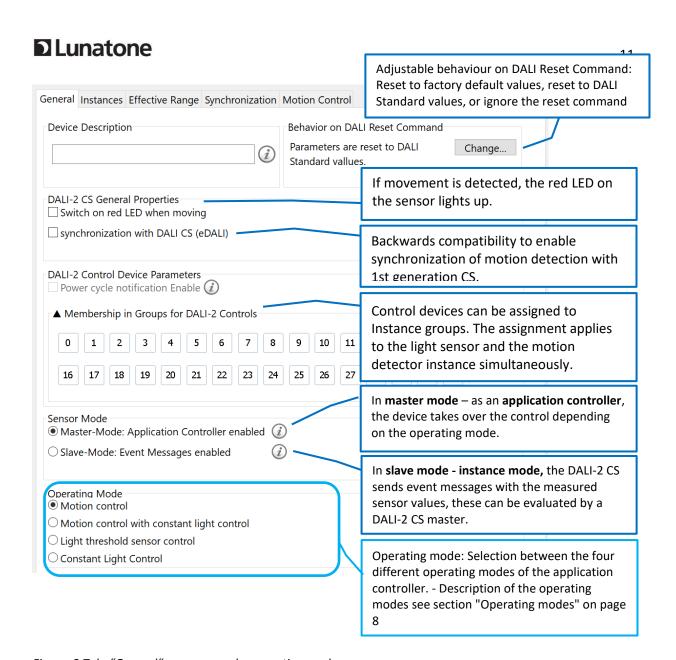


Figure. 2 Tab: "General" – sensor mode, operating mode

## Tab: "Effective range" - effective range, external control and power-up behaviour

See Figure. 3. On this tab the effective range of is defined: which DALI-gears are controlled by the CS. In addition, external control addresses can be defined, which the CS also monitors. The behaviour of the CS in case of

other control units sending commands to these addresses can be defined. This way, manual control of lights via a switch can be realised, without interference of the motion detection or constant light control.



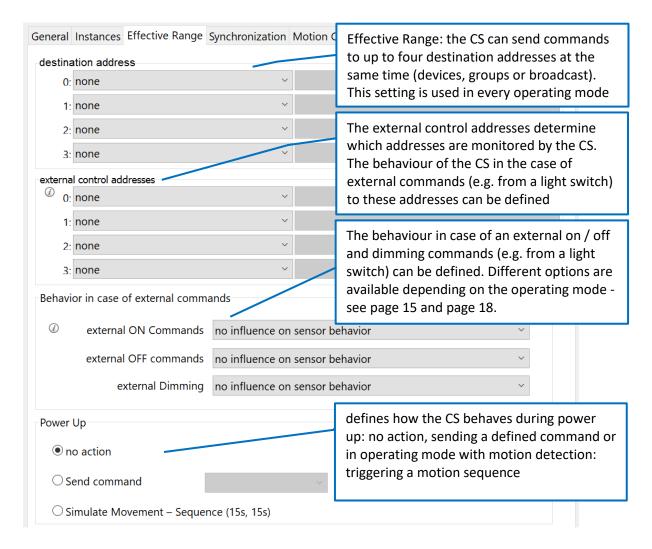


Figure. 3 Tab: "Effective Range" – destination address and external control address

## Tab: "Synchronization" – sensor input and Slaves

See Figure. 4. To include other sensor measurements into the evaluation, additional DALI-2 CS can be selected as sensor inputs. The selected DALI-2 CS are automatically set to slave mode by the currently configured DALI-2 CS (Master). Depending on the operating mode, different sensors input for each sensor-functionality can be defined:

for "Motion detection": input for movement, input for light thresholds

for "Motion detection with constant light control":

input for movement, input for light thresholds, input for constant light control

for "Constant light control": input for constant light control

for "Light control": input for light thresholds.



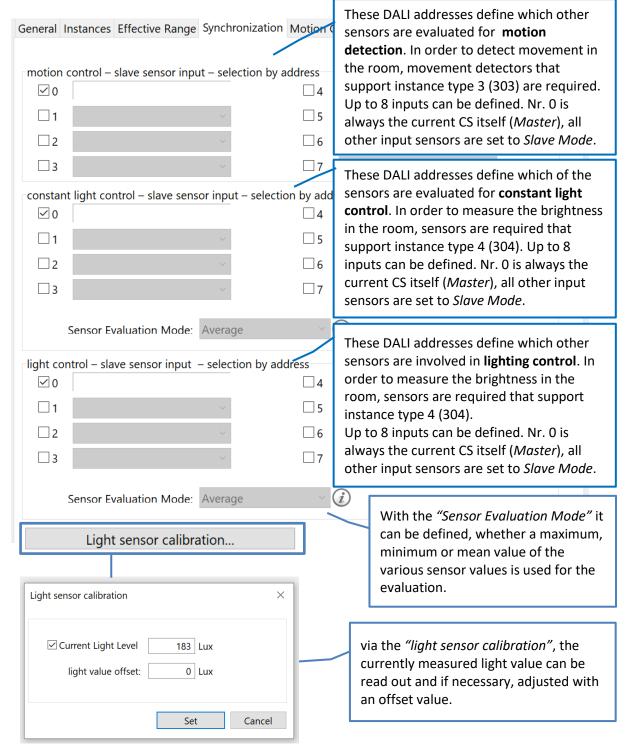


Figure. 4 Tab: "Synchronisation" - sensor inputs for measurement evaluation



#### Tab: "Motion Control"

See Figure. 5, in this tab, the times and light levels of the motion detection sequence, that is triggered by movement, can be defined. As

well as the light thresholds to activate the motion detection depending on the lighting conditions. (operating mode description see page 8 and page 9)

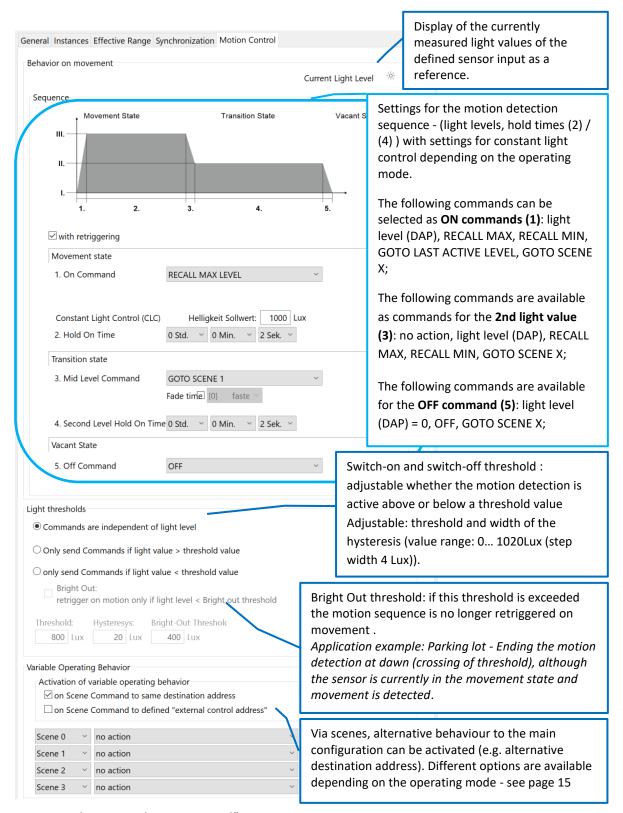


Figure. 5 Tab: "motion detection control"



### Motion Control - Behaviour with external commands

The operating behaviour can be influenced by external commands (e.g. from a DALI-switch).

In the Cockpit tab "Effective range", the behaviour of the sensor on ON- / OFF- and dimming commands, sent to the 4 configurable "external control addresses", can be defined.

Additionally, the operating behaviour of the sensor can be changed with scene commands, via the tab "Motion detection" -section: Variable Operating Behaviour.

The following settings are available:

### Operating mode 1 – motion detection

### An external ON command

**No influence:** the ON command is ignored by the CS. The CS continues to carry out the control as configured

**External control:** motion control is deactivated (The CS does not send any DALI commands), until manually reactivated by an external OFF command.

**Simulate movement:** start the Motion Detection Sequence (Figure. 1, page 6)

### An external **OFF command**

**No influence:** the OFF command is ignored by the CS. The CS continues to carry out the control as configured

**Waiting for motion**: change to State 5 and then to OFF state (state 7, Figure. 1), motion detection active - waiting for motion

**Disable sensor control:** change to state 5 and then to OFF state (state 7, Figure. 1), the motion detection is deactivated until reactivated by an ON command.

#### an external **DIMMING command**:

**No influence:** the DIMMING command is ignored by the CS. The CS continues to carry out the control as configured

**External control:** motion control is deactivated (The CS does not send any DALI commands), until manually reactivated by an external OFF command.

Change light level until end of sequence: the On command light level (State 2, Figure. 1) is changed by dimming. The new light level is retained for the current movement detection sequence

### Variable Operating Behaviour -

An external SCENE command

**No action:** the SCENE command is ignored by the CS.

**Reset to Default:** The CS is set to the basic configuration, all previously forced changes to the operating behaviour are terminated.

Alternative destinations: An alternative destination address (user defined) is used instead of the configured standard destination.

### **Alternative ON Command Light Level DAP:**

Instead of the currently configured DALI command, a user defined light level (DAP value) is used in state 2 (Motion Detection Sequence Figure. 1).

Alternative ON Command SCENE: Instead of the currently configured DALI command, a user defined Scene is used in state 2 (Motion Detection Sequence Figure. 1).

**Waiting for motion**: go to State 5 and then to OFF state (state 7, Figure. 1),. motion detection active - waiting for motion

## Operating Mode 2 – motion detection with constant light control

An external ON command



**No Influence:** the ON command is ignored by the CS. The CS continues to carry out the control as configured

**External control:** Constant light control and motion control are deactivated (The CS does not send any DALI commands). until they are reactivated by an external OFF command.

**Simulate movement:** start the Motion Detection Sequence (Figure. 1, page 6)

Simulate movement without constant light control: Starts the motion detection sequence (State 1, Figure. 1) and deactivates the constant light control. The sent ON command is executed instead of constant light control. The constant light control is temporarily deactivated until the OFF-state (state 7, Figure. 1) is reached.

**Constant Light Control:** The motion detection is deactivated and constant light control is permanently active until it is cancelled by an OFF command. (Standard behaviour is thereby reactivated)

### An external OFF command

**No Influence:** the OFF command is ignored by the CS. The CS continues to carry out the control as configured

Waiting for motion: Got to OFF state - go to State 5 and then to OFF state (state 7, Figure. 1), motion detection active - waiting for motion

Disable sensor control: change to state 5 and then to OFF state (state 7,Figure. 1) , the motion detection is deactivated until reactivated by an ON command. Enables: "Off Only ": if the CS should only send an off command after a manual on (simulate movement) after the hold time has expired

### an external DIMMING command:

**no influence**: the DIMMING command is ignored by the CS. The CS continues to carry out the control as configured

**External control:** Constant light control and motion control are deactivated (the CS does not send any DALI commands) until they are reactivated by an OFF command.

Disable constant light control until end of sequence: constant light control is deactivated temporarily during Motion Detection Sequence (State 2). Automatic reactivation of constant light control after end of sequence

Change constant light control reference light level until end of sequence: the reference light level for constant light control is changed by dimming. If no dimming process is detected for 2 seconds, the current light value is adopted as the new setpoint for the constant light control. The new setpoint is only retained for the current movement detection sequence (as long as movement is detected).

Change constant light control reference light level: the reference light level for constant light control is changed by dimming. If no dimming process is detected for 2 seconds, the current light value is adopted as the new setpoint for the constant light control.

### Variable Operating Behaviour - An external SCENE command

**No action:** the SCENE command is ignored by the CS

**Reset to defaults:** The CS is set to the basic configuration, all previously forced changes to the operating behaviour are terminated.

**Alternative destinations:** An alternative destination address (user defined) is used instead of the configured standard destination.

Alternative ON Command Light Level DAP: Instead of the currently configured DALI command, a user defined light level (DAP value) is used in state 2 (Motion Detection Sequence Figure. 1).

Alternative ON Command SCENE: Instead of the currently configured DALI command, a user defined Scene is used in state 2 (Motion Detection Sequence Figure. 1, page 6).

Alternative constant light control reference light level: Instead of the current reference value an alternative user defined light level is used

**Disable Constant Light Control until end of sequence:** constant light control is deactivated



temporarily during Motion Detection Sequence (State 2). Automatic reactivation of constant light control once no more movement is detected.

**external control:** Constant light control and motion control are deactivated. The CS does not send any DALI commands.

Waiting for motion: Got to OFF state - go to State 5 and then to OFF state (State 7, Figure. 1) motion detection active - waiting for motion

### Tab: "Light Control"

Depending on the selected operating mode:

### Operating mode: Constant light control

See Figure. 7. The tab "light control" contains the settings for constant light control (CLC) if the Operating mode: "constant light control" was selected.

### Operating mode: Light threshold control

See Figure. 6. If the Operating Mode: "Light-controlled" was selected the light sensor control functions as a threshold switch. A maximum of 4 thresholds can be defined. The defined DALI commands will be executed if the values are exceeded or fallen below of.

2 of the 4 available thresholds can also be used to send commands periodically. The commands are sent at a user-defined interval until the threshold condition is no longer met.

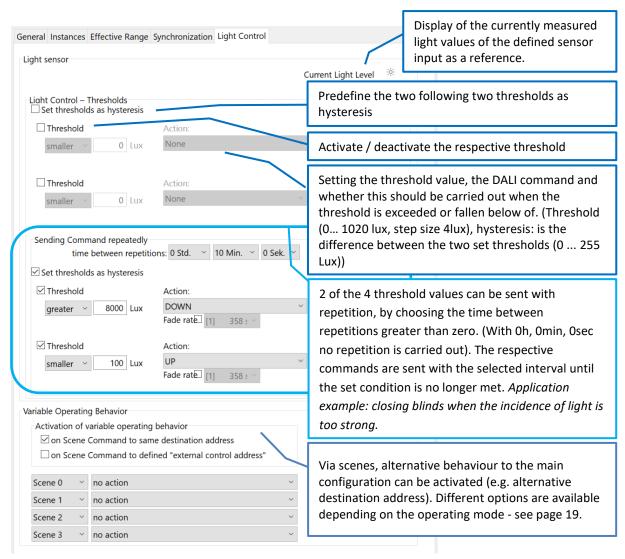


Figure. 6 Tab: "Light Control" -Operating Mode: without constant light control



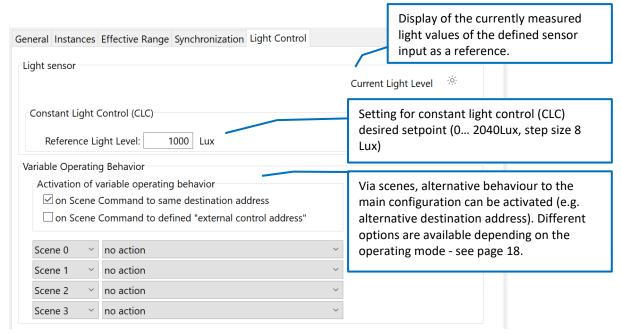


Figure. 7 Tab: "Light Control" - Operating Mode: with constant light control

### Light Control - Behaviour with external commands

The operating behaviour can be influenced by external commands (e.g. from a DALI-switch).

In the Cockpit tab "Effective range", the behaviour of the sensor on ON- / OFF- and dimming commands, sent to the 4 configurable "external control addresses", can be defined.

Additionally, the operating behaviour of the sensor can be changed with scene commands, via the tab "Motion detection" -section: Variable Operating Behaviour.

The following settings are available:

### Operating Mode 3 - constant light control

### An external ON command

**No influence:** the ON command is ignored by the CS. The CS continues to carry out the control as configured

**External control:** the constant light control is deactivated. (the CS does not send any DALI

commands), until reactivated by an external OFF command.

**Enable constant light control:** The constant light control is activated.

### An external OFF command

**No influence:** the OFF command is ignored by the CS. . The CS continues to carry out the control as configured

**Disable constant light control:** The constant light control is deactivated.

### an external DIMMING command:

**No influence:** the DIMMING command is ignored by the CS. The CS continues to carry out the control as configured

**Disable constant light control temporarily:** constant light control is deactivated until the next OFF command.

Change constant light control reference light - temporary: the reference light level for constant light control is changed by dimming. If no further dimming process is detected for 2 seconds, the current light value is adopted as the new setpoint for the constant light control. The new setpoint is only retained until the next OFF command.



Change constant light control reference light level -general: the reference light level for constant light control is changed by dimming. If no dimming process is detected for 2 seconds, the current light value is adopted as the new setpoint for the constant light control.

### Variable Operating Behaviour An external SCENE command

**No action:** the SCENE command is ignored by the CS

**Reset to Default:** The CS is set to the basic configuration, all previously forced changes to the operating behaviour are terminated.

**Alternative destinations:** An alternative destination address (user defined) is used instead of the configured standard destination.

Alternative constant light control reference light level: Instead of the current reference value an alternative user defined light level is used

**Enable constant light control:** The constant light control is activated.

**External Control:** The constant light control is deactivated (the CS does not send any DALI commands).

### Operating Mode 4 – light threshold control

## Variable Operating Behaviour - An external SCENE command

**No action:** the SCENE command is ignored by the CS

**Reset to Defaults:** The CS is set to the basic configuration, all previously forced changes to the operating behaviour are terminated.

**Alternative Destinations:** An alternative destination address (user defined) is used instead of the configured standard destination.

**External control:** the light threshold control is deactivated (the CS does not send any DALI commands).

### **Instances**

DALI-2 CS Corridor (Art.Nr.: 88793325 and with extensions.: -IP65) and

DALI CS Corridor Integration (Art.Nr.: 88793325-INT

and with extensions.: -IP65)

The DALI-2 CS Corridor and DALI-2 CS Corridor Integration support 2 instances standardized according to DALI: motion detector instance (303) for motion detection and light sensor instance (304) for light measurement. In *Slave mode*, the DALI-2 CS is automatically in instance mode. The factory settings are designed for use in conjunction with a DALI-2 CS *Master*.

- Instance Nr. 0: Type motion detector
- Instance Nr. 1: Type light sensor

#### Instances – General

Each instance can be configured individually. Some settings have the same functionality for all sensor instances and are therefore described in this section. Instance specific settings are explained for each individual instances in the following respective sections.

### enable/disable

If instances are not required, they can be deactivated. In this case, event messages are not sent, and the measured values are not updated. They can, however, still be queried via a "Query" command, and the DALI-2 configuration commands and queries are still supported.

### **Event Scheme**

The event scheme determines which information is transferred with the event. This information is required, to enable recognition and / filtering of events on the bus. The following 5 options are available:

- Instance addressing: instance type and instance number
- Device Addressing: device address and instance type

**D** Lunatone

- Device/Instance Addressing: device address and instance number
- Device Group Addressing:
   Device group and instance type
- Instance Group Addressing:
   Instance group and instance type

### Instance group

Up to three instance groups can be assigned for each instance. Only the "Primary Group" is used for the event.

### Instance type

The instance type defines which DALI-2 standard is valid for this instance. (The different instance types are specified in the DALI-2 standard.)

#### Instance number

Each instance in a device has a unique instance number.

### Device group

The device can be assigned to up to 32 device groups (0...31). The lowest device group is used for the event.

### **Device address**

A device address (or short address) (0..63) can be assigned to each device. With this the device can be clearly addressed. (Identical short addresses should be avoided.)

### **Event priority**

The event priority determines the order in which events are sent when they occur simultaneously on the bus. Priority 2 = highest and 5 = lowest.

### **Dead Time**

The dead time can be set for each instance. It determines the time that must pass before an event can be sent again. This also applies if the event information (measured value) changes.

If no dead time is required, it can be deactivated.

### **Report Time**

If the event information does not change, the event is sent cyclically with the report time. The report time can be set for each instance. It determines the maximum time between a sent event and resending.

### Hysteresis

Not every change in value leads to an event being generated. The hysteresis can be used to set which percentage change is necessary to trigger a new transmission. Attention, the hysteresis band is not arranged symmetrically. The following applies:

### Increasing value

The condition for an event is only fulfilled if the next value falls below the previous value minus the hysteresis or if the next value is greater than the previous value.

### Decreasing value

the condition for an event is only fulfilled if the next value exceeds the previous value plus the hysteresis or the next value is smaller than the previous value.

### Hysteresis Min

Is the minimal hysteresis value that cannot be fallen below of.

### Instance 0 - Motion

Is an instance standardized by DALI-2 (62386-303), for sensors that detect motion. All settings are implemented according to the standard. The instance is DALI-2 certified.

The sensor switches between the following states:

- People in the room and movement (0xFF)
- People in the room and no movement (0xAA)

### **D** Lunatone

### Empty room (0x00)

If the sensor detects movement, it immediately changes to the state: "people in the room and movement". This state is exited after 1 second at the earliest if no further movement is detected. In this case it changes to the state "People in the room and no movement". After the hold time has expired it changes to the state "Empty room"- Vacant.

Hold Time: Is the time that must pass before the state "people in the room and no movement" is changed to the state "empty room". If movement is detected during this time the state is changed back to: "People in the room and movement". (min. 1 second)

**Query Input Value:** The current sensor state can be queried using this DALI command. The following values are possible: 0x00, 0xAA,0xFF (see paragraph above for the possible states)

**Event:** the sensor status is transmitted by events. The following event information is available:

Bit0 = 0: No Movement

Bit0 = 1: Movement

Bit2/Bit1 = 00: Vacant

Bit2/Bit1 = 10: Still Vacant

Bit2/Bit1 = 01: Occupied

Bit2/Bit1 = 11: Still Occupied

Bit3 = 1: Movement Sensor

Bit5..Bit9 = 0: unused

More details can be found in the standard 62386-303.

**Event filter:** The event filter defines for which status change an event is generated.

Filter arrangement:

Bit0: Occupied Event active

Bit1: Vacant Event active

Bit2: Still Vacant/Occupied Event active

Bit3: Movement Event active

Bit4: No Movement Event active

Bit5..Bit7: unused

**Report Time:** can only be set if the event filter "Repeat" is activated and the events: "Still Vacant" and "Still Occupied" are enabled. The time between sending a "Still-Event" again is determined by the Report Time.

### Instance 1 – Light intensity

is an instance standardized by DALI-2 (62386-304). All settings are implemented according to the standard. The instance is DALI-2 certified.

The current light value (lux) is measured by the sensor and can either be queried using a "Query" command or can be automatically provided by the sensor using an event.

The measuring range is OLux ... 2046Lux. The resolution differs between queries and generated events. A query supports a resolution of 1Lux (11Bit) and an event a resolution of 2Lux (10Bit).

*Hysteresis*: For information on the hysteresis see section Instances -General: *Hysteresis* page 20.

**Hysteresis Min:** set in lux. For general information on the hysteresis min see section Instances – General: *Hysteresis Min* page 20

**Event Filter:** The light instance generates only one event with 10-bit resolution (0... 2047 lux, step size 2lux). If the filter is deactivated, no events will be sent.



### **Cockpit - Instances**

The settings for the instances can be made in the Cockpit – tab "Instances".

Example for settings of instance 0 – motion see Figure. 8. Example for settings of instance 1 – light intensity see Figure. 9

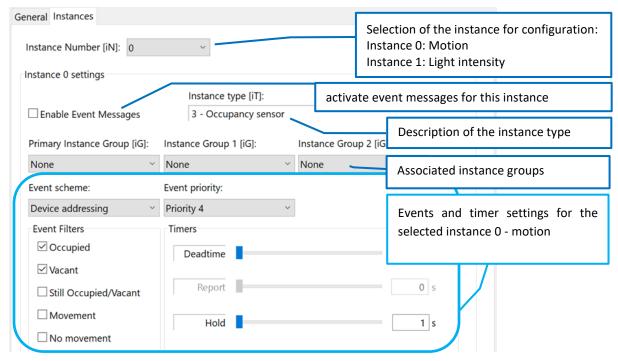


Figure. 8 tab: "Instances" – motion detector instance

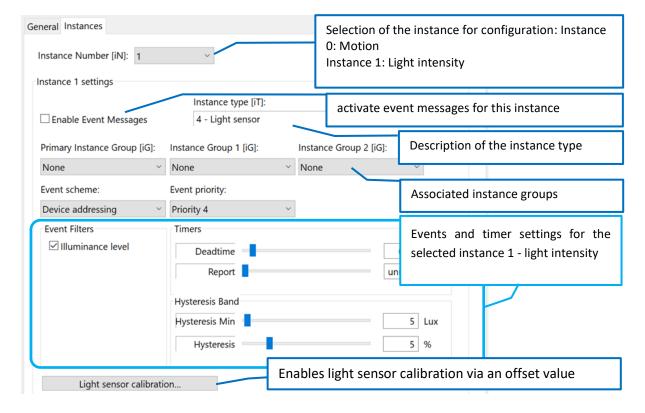


Figure. 9 tab: "instances" - light sensor instance

### **Purchase Order Information**

**Art.Nr. 88793325**: DALI-2 CS Corridor sensor module (motion/brightness), presence detection 2.5m, constant light control, black, 44 x16x22mm

Art.Nr. 88793325-IP65: DALI-2 CS Corridor sensor module (motion/brightness), presence detection 2.5m, constant light control for outdoor use IP65, black, 44 x16x22mm

**Version: Integration** for integration in systems with central control unit

**Art.Nr. 88793325-INT**: DALI-2 CS Corridor sensor module (motion/brightness), Instancemode for integration, black, 44 x16x22mm

Art.Nr. 88793325-INT -IP65: DALI-2 CS Corridor sensor module (motion/brightness), Instancemode for integration, for outdoor use IP65, black, 44 x16x22mm

# Additional Information and Equipment

DALI-Cockpit – free configuration tool from Lunatone for DALI systems <a href="https://www.lunatone.com/en/product/dali-cockpit/">https://www.lunatone.com/en/product/dali-cockpit/</a>

Lunatone DALI products <a href="http://www.lunatone.at/en/">http://www.lunatone.at/en/</a>

Lunatone datasheets and manuals <a href="http://lunatone.at/en/downloads/">http://lunatone.at/en/downloads/</a>

### Contact

Technical Support: <a href="mailto:support@lunatone.com">support@lunatone.com</a>

Requests: sales@lunatone.com

www.lunatone.com





### Disclaimer

Subject to change. Information provided without guarantee. The datasheet refers to the current delivery.

The function in installations with other devices must be tested for compatibility in advance.